



INSTRUCTION MANUAL

COUPLING/DECOUPLING

NETWORK M2

MODEL EM-7802

INSTRUCTION MANUAL

THIS INSTRUCTION MANUAL AND ITS ASSOCIATED INFORMATION IS PROPRIETARY. UNAUTHORIZED REPRODUCTION IS FORBIDDEN.

© 1996 ELECTRO-METRICS CORP.

COUPLING/DECOUPLING NETWORK M2

ELECTRO-METRICS

MODEL EM-7802

SERIAL NO: N/A

ELECTRO-METRICS CORPORATION

231 Enterprise Road, Johnstown, New York 12095

Phone: (518) 762-2600

Fax: (518) 762-2812

EMAIL: info@emihq.com

WEB: <http://www.electro-metrics.com>

MANUAL REV. NO: EM7802-0796

ISSUE DATE: JULY 01 1996

WARRANTY

This Model EM-7802 Coupling/Decoupling Network M2 is warranted for a period of 12 months (USA only) from date of shipment against defective materials and workmanship. This warranty is limited to the repair of or replacement of defective parts and is void if unauthorized repair or modification is attempted. Repairs for damage due to misuse or abnormal operating conditions will be performed at the factory and will be billed at our commercial hourly rates. Our estimate will be provided before the work is started.

TABLE OF CONTENTS

| SECTION | TITLE | PAGE |
|----------------|---------------------------------|-------------|
| A-1 | Appendix A: List Of Accessories | A-1 |
| 1.0 | Introduction | 1 |
| 2.0 | Specifications | 1 |
| 3.0 | Description EM-7802 | 2 |
| 4.0 | Operating Instructions | 2 |
| 5.0 | Reference Information | 3 |

LIST OF ILLUSTRATIONS

| FIGURE | TITLE | PAGE |
|---------------|---------------------------|-------------|
| 1 | Schematic Diagram EM-7802 | 4 |

APPENDIX 1
EM-7802 ACCESSORIES

The following accessories are standard with the **EM-7802 Coupling/Decoupling Network M2**.

- a.** 50-ohm Termination, BNC Connector.
- b.** Four (4) Superior Plug/Pin Connectors:
 - INPUT: 2
 - OUTPUT: 2
- c.** 50/150-ohm Impedance Matching Network.
 - Quantity: 2
- d.** 6 dB Attenuator

**DESCRIPTION AND USE
COUPLING/DECOUPLING NETWORK M2
ELECTRO-METRICS MODEL EM-7802**

1.0 Introduction

The EM-7802 Coupling/Decoupling Network M2 is a low pass filter network that allows coupling of RF signals onto the power lines of a device being tested to IEC-1000-4-6 (formerly IEC 801.6).

The EM-7802 is used for conducted susceptibility testing of devices powered by single phase with two power input wires. The network is designed to be fully compliant with IEC-1000-4-6.

Included with each unit, as required by IEC-1000-4-6:

- a. High power 6 dB attenuator, quantity: 1,
- b. 50/150-ohm matching networks, quantity: 2.

2.0 Specifications

2.1 Electrical

| | |
|----------------------------|--|
| Injection Frequency Range: | 150 kHz-80 MHz |
| Power Line Frequency: | DC to 60 Hz. |
| AC Current: | 25 Ampere rms. |
| AC Voltage: | 250 Vrms. |
| Injection Port Voltage: | 20 Vrms. |
| Connectors: | Injection Port: BNC AC Input/Output: Superior Plug/Socket |
| Grounding Connector: | Threaded Stud. |

2.2 Mechanical

| | |
|-------------------|-------------------|
| Height: | 100 mm (3.95") |
| Length: | 218 mm (8.6") |
| Over Ground Stud: | 239 mm (9.4") |
| Width: | 171 mm (6.75") |
| Weight: | 1.5 kg (3.25 lbs) |

3.0 Description EM-7802

The two end panels for the EM-7802 Network are marked:

- a. Auxiliary Equipment (AE),
- b. Equipment Under Test (EUT).

3.1 Auxiliary Equipment Panel

a. AC Connectors

Type: Socket Receptacle, Superior Type RS.

Quantity: 2.

Color:

1) **Red (LINE 1):** AC Input line.

2) **Black (LINE 2):** AC Return line.

Function: To connect to the power source either directly or via other equipment.

b. Ground Connector

Type: Brass Stud.

Quantity: 1.

Function: To connect to the ground plane or shielded enclosure.

3.2 Equipment Under Test Panel

a. AC Connectors

Type: Pin Receptacle, Superior Type RP.

Quantity: 2.

Color:

1) **Red (LINE 1):** AC Input line.

2) **Black (LINE 2):** AC Return line.

Function: To connect to the Equipment Under Test AC power input.

4.0 Operating Instructions

The AE (Auxiliary Equipment) panel of the network should be connected to the power source (either direct or via other equipment) using the two plug sockets provided (Superior Plug Sockets). Attach these plugs to the pin receptacles located on the AE panel. The ground connection should be made through the brass stud (marked GND), on the AE panel.

WARNING

SAFETY GROUND SHOULD BE CONNECTED FIRST AND DISCONNECTED LAST ON INPUT OR AE SIDE OF NETWORK.

NOTE

A BRASS RF GROUND STUD IS PROVIDED ON THE AE PANEL FOR CONNECTION TO THE GROUND PLANE.


The EUT (Equipment Under Test) panel of the network should be connected to the device under test using the two pin plugs provided.

The RF test signal at the required level is applied to the BNC connector (top panel) on the EUT end of the network. The signal is normally applied through the 6 dB attenuator (supplied).

5.0 Reference Information

The design of the EM-7802 Coupling/Decoupling Network M2 is based on the information contained in International Electrotechnical Commission Publication IEC 1000-4-6 (Para. 6.2).

The application and verification of the coupling/decoupling network is explained in detail by the IEC publication. For any questions concerning the use of the network, 50/150-ohm impedance matching network, or procedures to be followed refer to the IEC publication.

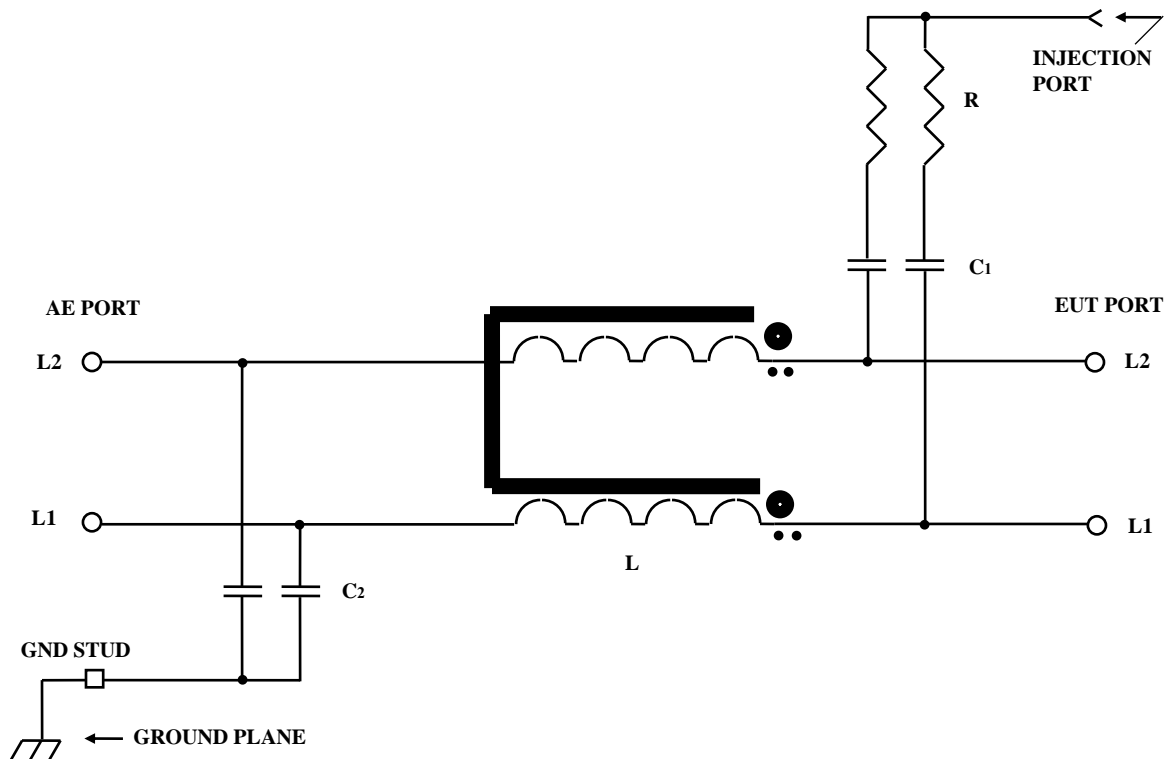

NOTE: $C_1 = 0.01 \mu\text{F}$ (typ.), $C_2 = 0.047 \mu\text{F}$ (typ.), $R = 200 \Omega$, $L = 684 \mu\text{H}$
 Ferrite Beads - as required.

Figure 1

Schematic Diagram EM-7802 Coupling/Decoupling Network M2